

1C



## Glow Plug Inspection

**Reference: Glow Plug Removal and Installation:D16AA**

Measure glow plug resistance as shown below.  
If resistance is not as specified, replace glow plug.

**Glow plug resistance**

**Approx. 0.4  $\Omega$  at 20 °C (68 °F)**

